



Main output

Steering output
 The steering axle passes through the gearbox,
 but actually has nothing to do with it.

	F3	F2	F1
1	+	+	+
2	+	-	+
3	+	+	-
4	+	-	-
5	-	+	+
6	-	-	+
7	-	+	-
8	-	-	-

← Input to cam via clutch.
 ← Input steering directly
 From engine